

This wallpaper is meant to transform your interior and dazzle your guests.

Mounting our wallpapers is easy thanks to a modern full production line for CANON and Fotoba wallpapers and UV GEL printing technology. Our UV GEL technology meets all safety standards and has ECO certificates. Printing with this technology is resistant to strong abrasion and chemical agents such as (acetone, alcohol and others).



Guarantee of colour and dimensional stability as well as resistance to damage and dirt!



Our wallpapers can be used both in private and public rooms.



Light cured print does not require lamination.

Installation instructions



Installation: ① Touch-up

During the installation, the edges of the wallpaper should be joined with each other on the „touchdown“ (the edges of two pieces of wallpaper adhere exactly to each other, creating a pattern).



Step 1

You have received your order and it is necessary to check the conformity:

- design
- colour
- number of pieces

It is important that the solids joined together form a single pattern and are free from defects. Our wallpaper factory has automatically printed and rolled up the rolls of your beautiful wallpaper - the rest is in your hands.

Get to work!



Step 2

The end result is the most important thing, so prepare the right tools:

- primer (deep penetrating - fungicide)
- fleece wallpaper glue
- a brush to spread the glue
- a clean dry cloth
- rubber roller for pressing wallpaper (wide)
- glue roller
- tape measure
- pencil
- rubber squeezing roller wallpaper (narrow)
- segment knife
- spirit-level



Step 3

Our wallpaper production process is fully automated, right up to rolling.

Make sure that the day before your wall mural is installed you roll out the lumps on the floor and leave them to straighten out.

Steps 4-10

→
Page 2



Step 4

Your wall has to be properly prepared. Any unevenness in the wall should be filled with mud.


Before applying wallpaper you should apply a primer, preferably two coats of a deep penetrating preparation (with fungicide properties).

Remember: If your wall needs a lot of preparation, here are some tips:

- remove washable paint
- remove old wallpaper
- remove fibreboard, particle board or other materials that hinder adhesion or other materials that make it difficult for wallpaper to adhere and fit.

Once these materials have been removed, follow the instructions above.

During the installation and 24 hours after installation, keep the windows in the room tightly closed.

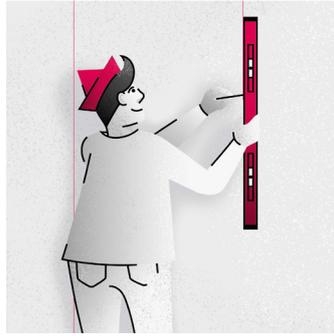

Step 5

Measure and mark the width of the strips (lumps) on the wall. Our standard is 100 cm, the marked lines should correspond to the width of individual blocks of wallpaper.

Use a spirit level to measure.



Step 8

If there is any glue on the top layer of wallpaper, remove it with a dry cloth.



Step 6

Spreading the adhesive on the wall.

Install the first piece of wallpaper from the corner of the wall to the window.

Use a roller to apply adhesive on the wall in the designated strip for the first piece. Use a brush to apply glue at the line (border of the strip).



Step 9

Proceed in the same way with the next block (first apply glue with a roller on the wall in the designated strip for the second block, brush glue on the edges).



Step 7

Carefully place the wallpaper on the adhesive-covered wall and press down with a wide rubber roller.

Press the joints of the wallpaper with a narrow roller.



Step 10

Cut off any excess wallpaper with a sharp knife using a spatula.

Thank you for putting your trust in Legendarte Wallpaper Factory!!